

What to do if...
What to do if...



A tire punctures

P. 465 If you have a flat tire



The engine does not start

P. 474 If the engine will not start
P. 78 Engine immobilizer system
P. 480 If the vehicle battery is discharged



The shift lever cannot be moved out of P

P. 475 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 483 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 476 If you lose your keys



The battery runs out

P. 480 If the vehicle battery is discharged



The doors cannot be locked

P. 39 Doors



The horn begins to sound

P. 80 Alarm



The vehicle is stuck in mud or sand

P. 486 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 441

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 441



Malfunction indicator lamp

or



P. 442



ABS warning light

or



P. 442



Driver's seat belt reminder light

P. 444



Front passenger's seat belt reminder light

P. 444



Low fuel level warning light

P. 444



Master warning light

P. 444



SRS warning light

P. 442



Electric power steering warning light

P. 442



Open door warning light

P. 444



Pre-collision system warning light

P. 442



Charging system warning light

P. 442



Tire pressure warning light

P. 444



A warning message is displayed

P. 451

If a warning message is displayed